


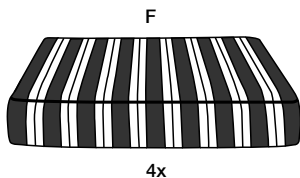
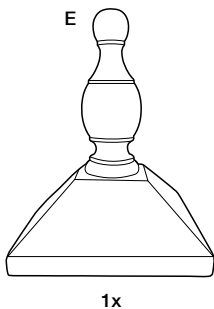
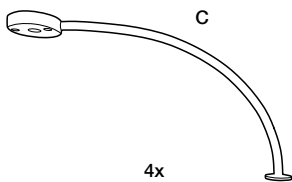


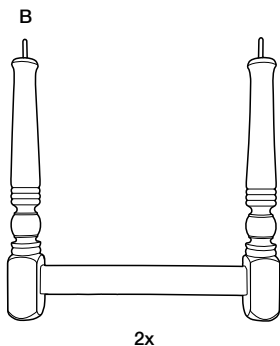

Seferî Pet Bed Assembly Instructions

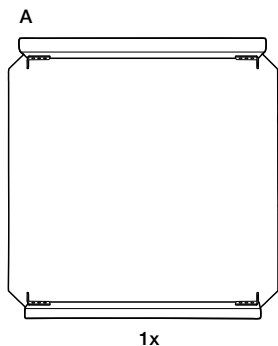

1. Place part **A** on a flat, stable surface.
2. Position two part **B** pieces along the short sides of part **A**. Ensure that the numbers on part **A** align with the corresponding numbers on part **B**.
3. Once parts **B** are correctly positioned along the edges of part **A**, secure them by tightening the screws through the holes in the metal fittings located on the top surface of part **A**, fastening all four corners.
4. Slide the larger rounded ends of parts **C** onto the small rods located on the top of parts **B**. Make sure that the numbers on parts **C** match the numbers on parts **B**.
5. Check that the large circular metal sections of parts **C** are aligned with the screw holes on parts **B**. When the holes are aligned, secure the parts using the screws provided.
6. Insert parts **D** onto the rods located on the four arms of the two parts **B**.
7. Place part **E** onto the smaller rounded sections at the top of parts **C**. Ensure that the numbered holes on the underside of part **E** align with the corresponding numbered holes on parts **C**.
8. Once all holes are aligned, insert the screws through the holes and fasten part **E** to parts **C**.
9. Position part **F** (cushion) on top of part **A** to finalize the setup.